

parmetol[®] A 26

Preservative for household products

- Water based combination of chloromethyl-/ methylisothiazolone (CMI/ MI) and O-formal
- Suitable for preservation of water based household products
- Broad, balanced spectrum of effect against bacteria, yeasts and moulds
- Good head space protection
- Effective in pH ranges up to 9.5

Active substance			
INCI name	EINECS-Name:	CAS-No.	EC-No.
Dimethylol Glycol	(Ethylenedioxy)dimethanol	3586-55-8	222-720-6
Methylchloroisothiazolinone	5-Chloro-2-methyl-2H-isothiazol-3-one	26172-55-4	247-500-7
Methylisothiazolinone	2-Methyl-2H-isothiazol-3-one	2682-20-4	220-239-6
(Mixture of 5-Chloro-2-methyl-2H-isothiazol-3-one and 2-Methyl-2H-isothiazol-3-one)		55965-84-9	

Physico-chemical properties	
Colour	nearly colourless - yellow
Form	Liquid
Odour	characteristic
Density (20 °C)	1.037 - 1.045 g/ml
Refractive index (20 °C)	1.347 - 1.356
Initial boiling point	ca. 100 °C
Flash point (ISO 2719)	> 100 °C
Flow time (DIN 53211 - 20 °C)	< 15 s
Water solubility (20 °C)	in all proportions
Foaming characteristics (DIN 53902)	Non foaming (0.1 % in water)
VOC-Content to Directive 2004/42/EC	9 %

Fields of application

The optimum use level should be evaluated by means of a repeated challenge test (e.g. at schülke Technical and Microbiological department). Limits for labelling can be seen from the separate schülke labelling sheet.

Use biocides safely. Always read the label and product information before use.

	Recommended dosage	
Washing-up liquids	0.5 - 1.5 g/kg	(0.05 - 0.15 %)
Detergent	0.5 - 2.0 g/kg	(0.05 - 0.20 %)
Liquid laundry detergents	0.5 - 2.0 g/kg	(0.05 - 0.20 %)
Fabric softener	0.5 - 1.0 g/kg	(0.05 - 0.10 %)
Window cleaners	0.5 - 2.0 g/kg	(0.05 - 0.20 %)
Liquid scouring cleansers	0.5 - 2.0 g/kg	(0.05 - 0.20 %)
Wax emulsions	0.5 - 2.5 g/kg	(0.05 - 0.25 %)
Wet wipes	0.5 - 2.0 g/kg	(0.05 - 0.20 %)
Other uses	Kindly contact us.	

Indications for use

Solubility	Fully soluble in water and in most polar organic solvents.
Compatibility with sulphite ions	parmetol [®] A 26 is inactivated by sulphite ions. Excessive sulphite > 10 ppm must be avoided.
Recommended use pH range	3 - 9.5
Maximum use temperature	max. 60 °C (depending on pH; recommended: max. 40 °C)
Additional advice	If possible, to be incorporated at an early stage during production. pH, temperature and redox conditions are to be taken into consideration. Avoid alkaline pre-solutions. Cleaning of equipment is possible by rinsing with water.

Microbiological efficacy

The efficacy of the product has been tested against the following microorganisms according to DGHM (German Society for Hygiene and Microbiology). Determination of the minimum inhibitory concentration in the serial dilution test produced the following values (MIC in % of the product):

Bacteria (gram-negative)	MIC	Bacteria (gram-positive)	MIC	Yeasts	MIC
<i>Alcaligenes faecalis</i>	0.0125	<i>Bacillus subtilis</i>	0.025	<i>Candida albicans</i>	0.025
<i>Enterobacter aerogenes</i>	0.012	<i>Brevibacterium ammoniagenes</i>	0.050	<i>Rhodotorula mucilaginosa</i>	0.025
<i>Escherichia coli</i>	0.025	<i>Staphylococcus aureus</i>	0.100	<i>Saccharomyces cerevisiae</i>	0.050
<i>Micrococcus luteus</i>	0.050	<i>Streptococcus faecium</i>	0.200		
<i>Proteus mirabilis</i>	0.012				
<i>Pseudomonas aeruginosa</i>	0.025	Sulphate-reducing bacteria	MIC	Moulds	MIC
<i>Pseudomonas fluorescens</i>	0.012	<i>Desulfovibrio desulfuricans</i>	0.050	<i>Alternaria spp.</i>	0.025
<i>Pseudomonas stutzeri</i>	0.0125			<i>Aspergillus niger</i>	0.025
				<i>Aureobasidium pullulans</i>	0.012
				<i>Fusarium oxysporum</i>	0.012
				<i>Penicillium spp.</i>	0.012
				<i>Trichoderma virens</i>	0.050

parmetol[®] A 26

Compatibility*		
	compatible	to be avoided
concentrate	plastics, sealants, metallic materials	unprotected steel
aqueous dilution (0.2 %)	No significant difference to water	Water incompatible materials

*Compatibility has to be proved in each case

Labelling	
R-phrase(s)	R36/38, R43, R51/53
S-phrase(s)	S24, S35, S37
Labelling	Xi (Irritant), N (Dangerous for the environment)
	For further hazard instructions and safety advice please refer to the actual material safety data sheet.


Environmental information
 parmetol[®] A 26 contains only biodegradable components. Dilutions of parmetol[®] A 26 do not normally interfere with the operation of waste water treatment plants. The canisters and drums used by schülke are made of polyethylene (HDPE) and are labelled accordingly. The 1000 kg containers are covered by a return scheme that ensures collection of the used containers free of charge and appropriate reuse all over Europe. The labels are made of PE. schülke packaging materials contain no PVC and can be recycled. For further information please ask for our detailed environmental report.

Listings and approvals of active ingredients
EINECS / ELINCS (Europe)
TSCA (USA)*
ECL (Korea)
DSL / NDSL (Canada)*
ENCS (Japan)*
PICCS (Philippines)
AICS (Australia)
IECSC (China)
BfR XIV, XXXVI
* In preserved aqueous products the (ethylenedioxy)dimethanol can be described also as a hydrolyzing product, ethane-1,2-diol and formaldehyde.

Transport & Storage	
Dangerous goods	Yes
UN-Number	3082
Packaging group	III
Package sizes	10 kg, 200 kg, 1000 kg
Shelf life	24 Months
Storage	Protect from frost, heat and direct sunlight. Store at room temperature in the original container.

Ecolabel			
	Basic criteria	Product type	max. use concentration
European Flower	2003/200/EC	Laundry detergents	0.20 %
European Flower	2005/342/EC	Hand dishwashing detergents	0.20 %
European Flower	2005/344/EC	all-purpose cleaners and cleaners for sanitary facilities	0.20 %

schülke subsidiaries:

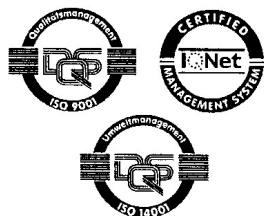

Belgium

S.A. Schülke & Mayr
 Belgium N.V.
 1830 Machelen
 Tel. +32-2-479 73 35
 Fax +32-2-479 99 66

China

Schülke & Mayr GmbH
 Shanghai Representative Office
 Shanghai 200041
 Tel. +86-21-62 17 29 95
 Fax +86-21-62 17 29 97

France

Schülke France SARL
 94250 Gentilly
 Tel. +33-1-49 69 83 78
 Fax +33-1-49 69 83 85

Italy

Schülke & Mayr Italia S.r.l.
 20148 Milano
 Tel. +39-02-40 21 820
 Fax +39-02-40 21 829

Netherlands

Schülke & Mayr Benelux B.V.
 2003 LM-Haarlem
 Tel. +31-23-535 26 34
 Fax +31-23-536 79 70

Switzerland

Schülke & Mayr AG
 8003 Zürich
 Tel. +44-466 55 44
 Fax +44-466 55 33

United Kingdom

Schülke & Mayr UK Ltd.
 Sheffield S9 1 AT
 Tel. +44-1142-54 35 00
 Fax +44-1142-54 35 01

Other Distributors:

Argentina · Australia · Austria · Belarus · Benin · Brazil · Bulgaria · Canada · Croatia · Czech Republic · Denmark · Egypt · Estonia · Finland · Ghana · Greece · Hong Kong · Hungary · India · Indonesia · Iran · Israel · Japan · Jordan · Korea · Kuwait · Latvia · Lebanon · Lithuania · Macedonia · Malaysia · New Zealand · Nigeria · Norway · Oman · Philippines · Poland · Portugal · Russia · Saudi Arabia · Singapore · Slovakia · Slovenia · South-Africa · Spain · Sweden · Syria · Taiwan · Thailand · Turkey · Ukraine · United Arab Emirates · USA · Vietnam · Yemen

Our recommendations regarding our products are based on in-depth scientific testing in our Research Department; they are given in good faith, but no liability can be derived from them. It is the responsibility of the final product manufacturer to assure that claims made for the final product are in conformance with all applicable local laws. In other respect our Conditions of Sale and Supply apply.

Schülke & Mayr GmbH
 22840 Norderstedt
 Germany
 Tel. +49 40 52100-0
 Fax +49 40 52100-244
www.schuelke.com
 sai@schuelke.com