

parmetol[®] N 20

Preservative for household products

- Suitable for fungicidal and bactericidal preservation of a broad range of water based products
- Free of chloromethylisothiazolone/ methylisothiazolone (CMI/ MI)
- Suitable when N-/ O-formals cannot be used e. g. for technical reasons
- Free of heavy metals and salts

Active substance			
INCI name	EINECS-Name:	CAS-No.	EC-No.
2-Bromo-2-nitropropane-1,3-diol	Bronopol	52-51-7	200-143-0
Octylisothiazolinone	2-Octyl-2H-isothiazol-3-one	26530-20-1	247-761-7

Physico-chemical properties	
Colour	nearly colourless - light yellow
Form	Liquid
Odour	nearly odourless
Density (20 °C)	1.161 - 1.173 g/ml
Refractive index (20 °C)	1.455 - 1.467
Initial boiling point	> 100 °C
Flash point (ISO 2719)	> 100 °C
Flow time (DIN 53211 - 20 °C)	< 25 s
Water solubility (20 °C)	20 g/l
Foaming characteristics (DIN 53902)	Non foaming (0.2 % in water)
VOC-Content to Directive 2004/42/EC	2.5 %

Fields of application
 The optimum use level should be evaluated by means of a repeated challenge test (e.g. at schülke Technical and Microbiological department).
 Limits for labelling can be seen from the separate schülke labelling sheet.

Use biocides safely. Always read the label and product information before use.

	Recommended dosage	
Washing-up liquids	1 - 2 g/kg	(0.10 - 0.20 %)
Detergent	1 - 2 g/kg	(0.10 - 0.20 %)
Liquid laundry detergents	1 - 2 g/kg	(0.10 - 0.20 %)
Fabric softener	1 - 2 g/kg	(0.10 - 0.20 %)
Liquid scouring cleansers	1 - 2 g/kg	(0.10 - 0.20 %)
Window cleaners	1 - 2 g/kg	(0.10 - 0.20 %)
Wax emulsions	1 - 2 g/kg	(0.10 - 0.20 %)
Wet wipes	1 - 2 g/kg	(0.10 - 0.20 %)
Shoe polishes	1 - 3 g/kg	(0.10 - 0.30 %)
Other uses	Kindly contact us.	

Indications for use	
Recommended use pH range	3 - 8.5
Maximum use temperature	max. 60 °C
Additional advice	If possible, to be incorporated at an early stage during production. pH, temperature and redox conditions are to be taken into consideration. Avoid alkaline pre-solutions and secondary amines. Cleaning of equipment is possible by rinsing with water.

Microbiological efficacy
 The efficacy of the product has been tested against the following microorganisms according to DGHM (German Society for Hygiene and Microbiology). Determination of the minimum inhibitory concentration in the serial dilution test produced the following values (MIC in % of the product):

Bacteria (gram-negative)	MIC	Bacteria (gram-positive)	MIC	Yeasts	MIC
<i>Enterobacter gergoviae</i>	< 0.025	<i>Staphylococcus aureus</i>	< 0.025	<i>Candida albicans</i>	< 0.025
<i>Escherichia coli</i>	< 0.025			Moulds	MIC
<i>Klebsiella pneumoniae</i>	< 0.025			<i>Aspergillus niger</i>	< 0.025
<i>Micrococcus luteus</i>	< 0.025			<i>Penicillium spp.</i>	< 0.025
<i>Pseudomonas aeruginosa</i>	< 0.025				
<i>Pseudomonas fluorescens</i>	< 0.025				
<i>Pseudomonas putida</i>	< 0.025				

parmetol[®] N 20

Compatibility*		
	compatible	to be avoided
concentrate	plastics, PVC (soft), steel, high-alloyed stainless steel (e. g. 1.4571), aluminium	brass, copper, zinc, iron, sealants other than mentioned
aqueous dilution (0.2 %)	No significant difference to water	Water incompatible materials

*Compatibility has to be proved in each case


Labelling	
R-phrases(s)	R21, R41, R43, R50/53
S-phrases(s)	S24, S26, S35, S36/37/39
Labelling	Xn (Harmful), N (Dangerous for the environment)
	For further hazard instructions and safety advice please refer to the actual material safety data sheet.

Environmental information
 parmetol[®] N 20 contains only biodegradable components. Dilutions of parmetol[®] N 20 do not normally interfere with the operation of waste water treatment plants. The canisters and drums used by schülke are made of polyethylene (HDPE) and are labelled accordingly. The 1000 kg containers are covered by a return scheme that ensures collection of the used containers free of charge and appropriate reuse all over Europe. The labels are made of PE. schülke packaging materials contain no PVC and can be recycled. For further information please ask for our detailed environmental report.

Listings and approvals of active ingredients	Transport & Storage												
EINECS / ELINCS (Europe) TSCA (USA) ECL (Korea) DSL / NDSL (Canada) ENCS (Japan) PICCS (Philippines) AICS (Australia) IECSC (China)	<table border="1"> <tr> <td>Dangerous goods</td> <td>Yes</td> </tr> <tr> <td>UN-Number</td> <td>3082</td> </tr> <tr> <td>Packaging group</td> <td>III</td> </tr> <tr> <td>Package sizes</td> <td>25 kg, 200 kg, 1000 kg</td> </tr> <tr> <td>Shelf life</td> <td>24 Months</td> </tr> <tr> <td>Storage</td> <td>Protect from frost, heat and direct sunlight. Store at room temperature in the original container.</td> </tr> </table>	Dangerous goods	Yes	UN-Number	3082	Packaging group	III	Package sizes	25 kg, 200 kg, 1000 kg	Shelf life	24 Months	Storage	Protect from frost, heat and direct sunlight. Store at room temperature in the original container.
Dangerous goods	Yes												
UN-Number	3082												
Packaging group	III												
Package sizes	25 kg, 200 kg, 1000 kg												
Shelf life	24 Months												
Storage	Protect from frost, heat and direct sunlight. Store at room temperature in the original container.												

Ecolabel			
	Basic criteria	Product type	max. use concentration
European Flower	2003/200/EC	Laundry detergents	0.20 %
European Flower	2005/344/EC	all-purpose cleaners and cleaners for sanitary facilities	0.20 %
European Flower	2005/342/EC	Hand dishwashing detergents	0.20 %

schülke subsidiaries:

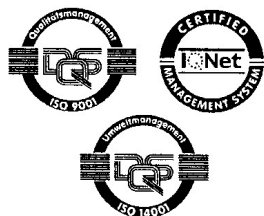

Belgium

S.A. Schülke & Mayr
Belgium N.V.
1830 Machelen
Tel. +32-2-479 73 35
Fax +32-2-479 99 66

China

Schülke & Mayr GmbH
Shanghai Representative Office
Shanghai 200041
Tel. +86-21-62 17 29 95
Fax +86-21-62 17 29 97

France

Schülke France SARL
94250 Gentilly
Tel. +33-1-49 69 83 78
Fax +33-1-49 69 83 85

Italy

Schülke & Mayr Italia S.r.l.
20148 Milano
Tel. +39-02-40 21 820
Fax +39-02-40 21 829

Netherlands

Schülke & Mayr Benelux B.V.
2003 LM-Haarlem
Tel. +31-23-535 26 34
Fax +31-23-536 79 70

Switzerland

Schülke & Mayr AG
8003 Zürich
Tel. +44-466 55 44
Fax +44-466 55 33

United Kingdom

Schülke & Mayr UK Ltd.
Sheffield S9 1 AT
Tel. +44-1142-54 35 00
Fax +44-1142-54 35 01

Other Distributors:

Argentina · Australia · Austria · Belarus · Benin · Brazil · Bulgaria · Canada · Croatia · Czech Republic · Denmark · Egypt · Estonia · Finland · Ghana · Greece · Hong Kong · Hungary · India · Indonesia · Iran · Israel · Japan · Jordan · Korea · Kuwait · Latvia · Lebanon · Lithuania · Macedonia · Malaysia · New Zealand · Nigeria · Norway · Oman · Philippines · Poland · Portugal · Russia · Saudi Arabia · Singapore · Slovakia · Slovenia · South-Africa · Spain · Sweden · Syria · Taiwan · Thailand · Turkey · Ukraine · United Arab Emirates · USA · Vietnam · Yemen

Our recommendations regarding our products are based on in-depth scientific testing in our Research Department; they are given in good faith, but no liability can be derived from them. It is the responsibility of the final product manufacturer to assure that claims made for the final product are in conformance with all applicable local laws. In other respect our Conditions of Sale and Supply apply.

Schülke & Mayr GmbH
22840 Norderstedt
Germany
Tel. +49 40 52100-0
Fax +49 40 52100-244
www.schuelke.com
sai@schuelke.com